




Step 2: Place the monitor into the panel cutout.

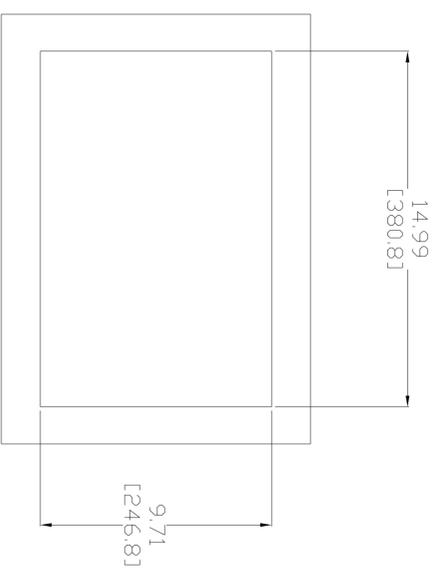

Outcut dimension is 14.99" (380.8mm) by 9.71" (246.8mm).  
Thickness of panel cannot exceed 5mm.

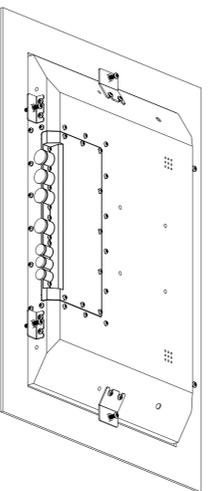

Step 3: Install the four remaining brackets. One on the left, one on the right, and two on top.

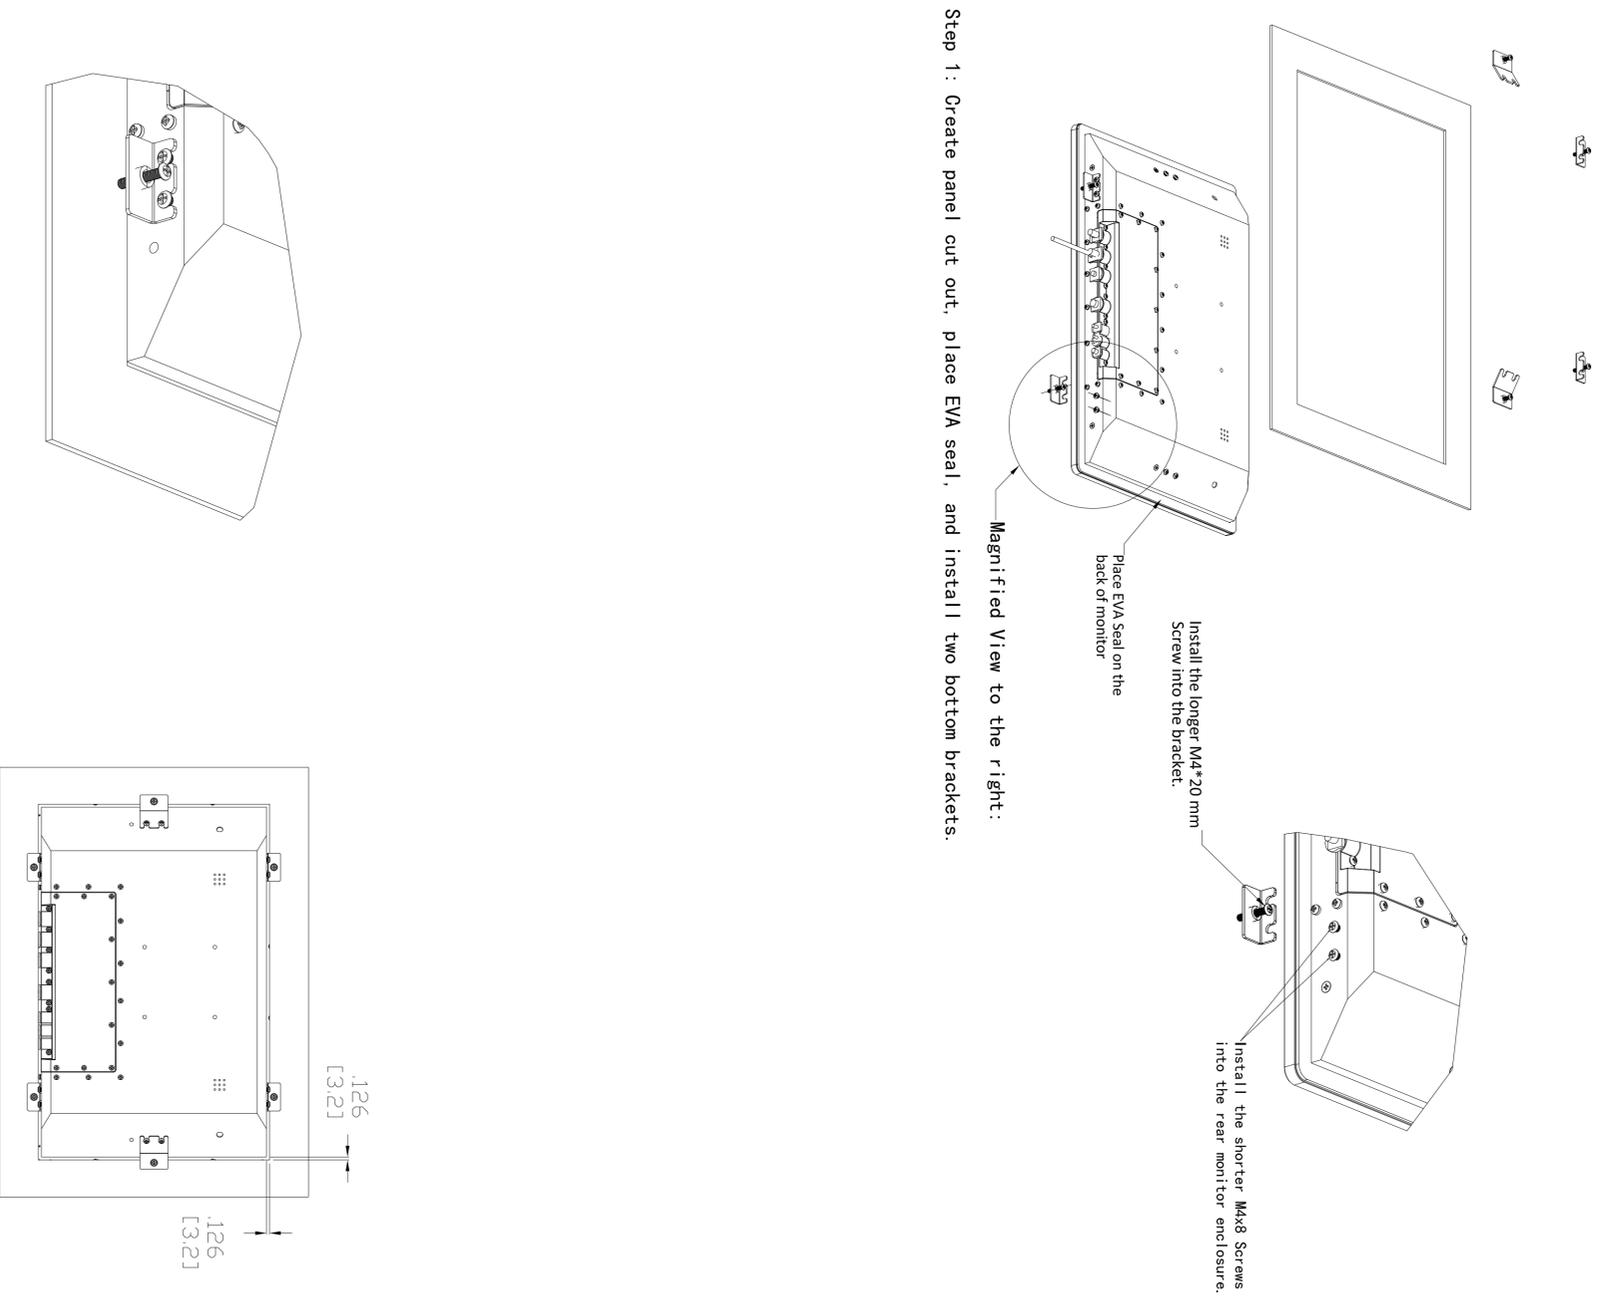

Step 1: Create panel cut out, place EVA seal, and install two bottom brackets.

Step 4: Tighten the shorter M4x8 screws to secure the bracket and tighten the longer M4x20mm screws to secure the monitor against the panel.